

Canon

PowerShot A70 PowerShot A60 DIGITAL CAMERA

Camera User Guide



DiGiC

- Please start by reading the Precautions on page 7 of this manual.
- Please refer to the *Software Starter Guide* for information on installing the software and downloading images.
- Please also read the printer user guide included with your Canon printer.



File Name: Canon a60 manual.pdf

Size: 3937 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 9 May 2019, 23:28 PM

Rating: 4.6/5 from 733 votes.

Download Now!

Please check the box below to proceed.



I'm not a robot



reCAPTCHA
Privacy - Terms

 
Book Descriptions:

Canon a60 manual

Canon

PowerShot A70
PowerShot A60
DIGITAL CAMERA

Camera User Guide

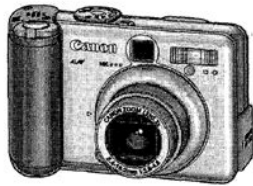

DiGiC

- Please start by reading the Precautions on page 7 of this manual.
- Please refer to the *Software Starter Guide* for information on installing the software and downloading images.
- Please also read the printer user guide included with your Canon printer.

Edi Print



DPOF



 
DIRECT PRINT



BUBBLE JET DIRECT

Introduces you to all of the camera components, and explains how to load batteries and use the shutter button, among other basic functions. These pages are shaded on the right edges to make them easy to find. Using the Optional Lenses and Lens Adapter. 197 Camera Care and Maintenance. Troubleshooting. Use of another charger may cause batteries. Please take care when operating the camera for an extended period as your hands may experience a burning sensation. Exposure to strong magnetic fields may cause malfunctions corrupt image data. Avoid Condensation Related Problems Moving the equipment rapidly between hot and cold temperatures may cause condensation water droplets to form. The camera beeps twice when the focus is set. Shoot p. 40. Press the shutter button all the way. Be sure that the camera power is off. Slide the battery cover lock in the direction of the arrow, and push the battery cover slightly forward. For information on handling the AA size rechargeable NiMH batteries, see Using the Optional Battery Kits p. 193. The negative terminal is correctly formed protruding from the metal base, but the seal does not extend up over the edge of the metal base. The LCD monitor displays an icon or message to let you know when batteries. Slide the CF card slot cover in the direction of the arrow, and open it. Do not perform the following, for image data may be lost or corrupted Do not shake the camera. Replace the date battery, then reset the date and time starting from step 5 below. Select a language using the up, down, left or right button. In replay mode, you can change the language by holding the SET button while you press the MENU button. Replaying mode The LCD monitor displays an image. This is convenient when you wish to shoot again after checking or deleting an image immediately after it is shot. Shooting Mode Replaying Mode The lens does not retract right away when the camera switches to Replaying mode. <http://archerelectricsupply.com/userfiles/documents-to-go-palm-manual.xml>

- 1.0, canon powershot a60 manual.

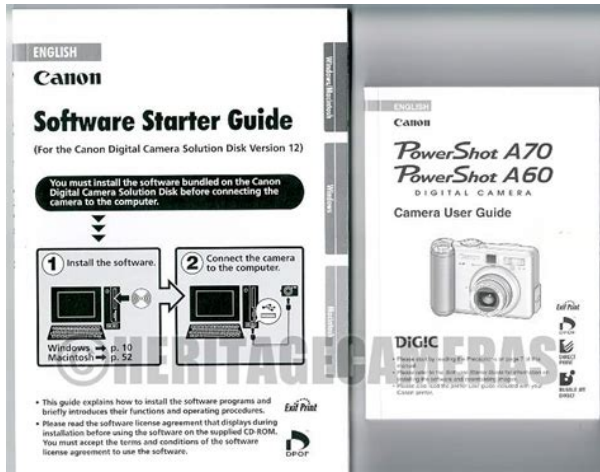


The image in the LCD monitor may darken when the monitor is used under sunlight or other strong lighting. This is not a defect. Shooting Mode Pressing. Align the square brackets autofocus metering field inside the viewfinder on the primary subject to compose the image. It delivers a crisp focus even when the photographic subject is slightly off-center. Image Seen in Viewfinder vs. Pressing Halfway Pressing halfway automatically sets the exposure, focus and white balance. The indicators light or blink as follows. Menus can be displayed by either pressing the FUNC. Watch the LCD monitor while performing the following procedures. Some menu items can only be selected after pressing the SET button and displaying the next menu. Press the SET button again to confirm the setting. For details, see Registering My Camera Settings p. 55 or the Software Starter Guide. Select a menu item using the up or down button. Select the menu item you wish to register using the up or down button. Press the SET button. In this mode, all you have to do is press the shutter button and let the camera do everything else. See Selecting Menus and Settings p. 43 Select a Review setting and press the MENU button. Resolution PowerShot A70 PowerShot A60 640 x 480 pixels 320 x 240 pixels 320 x 240 pixels 160x120pixels 160x120pixels Turn the shooting mode dial to the desired Shooting mode. You can shoot the image right after selecting settings by pressing the shutter button. This screen will appear again, once the image is shot. Press the FUNC. button. Shoot the image. The flash fires automatically Redeye reduction, required by the lighting level, and Auto the red-eye reduction lamp fires each time the main flash fires. The flash fires automatically Auto required by the lighting level. Please refer to Functions Available in Each Shooting Mode p. Turn the shooting mode dial to till. <http://vico-real-estate.com/userfiles/documentum-d2-manual.xml>

Canon

PowerShot A70
PowerShot A60
DIGITAL CAMERA

 Camera User Guide

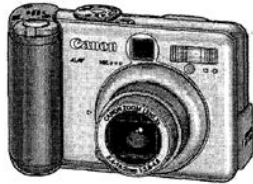

DiGiC

- Please start by reading the Precautions on page 7 of this manual.
- Please refer to the *Software Starter Guide* for information on installing the software and downloading images.
- Please also read the printer user guide included with your Canon printer.

 
Edi Print



The people are illuminated with light from the flash while the backdrop is captured at a slow shutter speed so that both appear correctly exposed. The PhotoStitch program detects the overlapping portions of adjoining images and merges them. The exposure and white balance settings are set and o.c locked with the first image, Compose and shoot the second. Recording will automatically stop when the maximum is reached or when the CF cards runs out of free capacity. Filming may stop unexpectedly with certain types of CF card if it is a slowrecording card, if it has been formatted on a different camera or a computer, or if images have. Shooting with the viewfinder is possible, though, the parallax phenomenon may cause images composed with the optical viewfinder to be offcenter 33. Faster shutter speeds allow you to catch an instantaneous image of a moving subject while slower speeds create a flowing effect and allow you to shoot without a flash in dark areas. If the aperture value shows in red, the image is under exposed insufficient light or overexposed too much light. Adjust the shutter speed using the left and right buttons until the aperture value display turns to white. Selecting a lower aperture value opening the aperture allows you to fade the background. A higher aperture value closing it brings the entire range from foreground to background into focus. Turn the shooting mode dial to Av. Adjust the aperture value using the left and right buttons until the shutter speed display turns white. This is convenient for shooting fireworks and other images where it is difficult to set the correct exposure automatically. Turn the shooting mode dial to M. The shutter speed and aperture value appears on the LCD monitor if it is on. The AF frame will appear when the LCD monitor is turned on p. 40. The camera automatically selects between 5 AF frames to focus according to the shooting conditions. Appropriate for standard shooting conditions, including backlight scenes.

The camera evaluates Light Metering the complex lighting conditions, such as the position of the subject, the brightness, the background, the direct light, and the backlighting, and adjusts the settings to. Press the DISP. button to turn on the LCD monitor. This screen will appear again, once the image is shot. Set the white balance mode to a natural or artificial light setting according to the circumstances. Adjust the flash output using the left or right button. You can shoot the image right after selecting settings by pressing the shutter button. Focus Lock Method 2 Press the DISP.Press the shutter button halfway to lock the focus. Press the DISE button to turn on the LCD monitor. Use them as a shooting guideline only. The file numbers are reset to the start 1000001 each time a new CF card is inserted. New images recorded on CF cards with existing files are assigned the next

available number. The file number of the last image to be shot is memorized so that images recorded to a new CF card. About File and Folder Numbers Images are assigned file numbers from 0001 to 9900, and folders are assigned folder numbers from 100 to 998 Folder numbers cannot contain 99 in the last two digits. The last recorded image appears single image replay. Move between images using the left or right button. Use the left button to move to the previous image and the right button to move to the next. Change the image selection using the left, right, up or down button. Movies cannot be viewed in index replay.Press it again to resume. Return to Single Image View First Frame Previous Frame Rewinds if the SET button is held. Select the movie you wish to edit and press button. See Viewing Movies p. 122. Select Edit using the left or right button and press button. The movie editing panel and the movie editing bar appear. See Selecting Menus and Settings p. 43. Select an image you want to rotate using the left or right button and press the SET button. The sound data is saved in WAVE format.

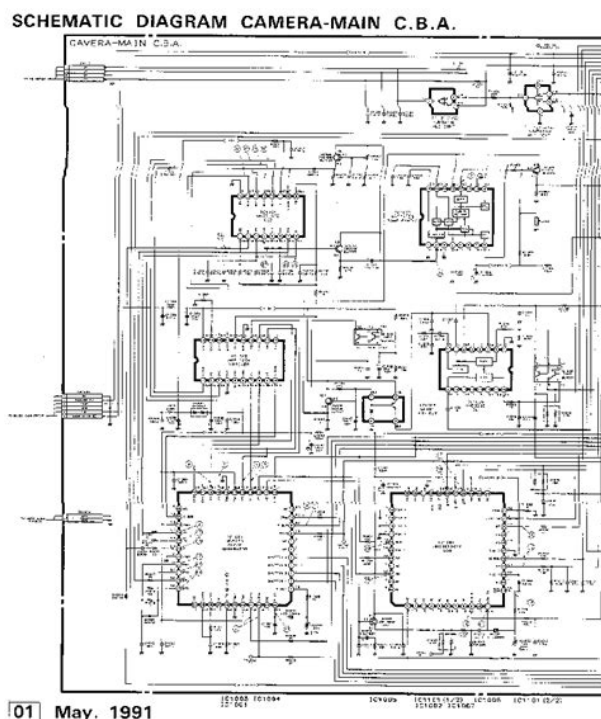

<http://ninethreefox.com/?q=node/11020>

The LCD monitor displays each image for approximately 3 seconds. See Selecting Menus and Settings p. 43. Select an image you want to protect using the left or right button and press the button. Exercise caution before erasing a file. A confirmation screen appears. A confirmation screen appears. Please note that formatting initializing a CF card erases all data, including protected images and other file types. It can also be used with DPOF print settings. Connect the camera and printer using the cable. Options for the Style category will differ slightly for BJ printers. An image can be printed when displayed in single replay or selected in index replay. Choose an image using the left or right button and press the button. A confirmation dialog appears. Specify the desired number of copies using the left or right button. You can specify from 1 to 99 prints. You can select from among the following print styles. Direct Print Function Compatible Printer. As a result, the images top, bottom and sides may be cropped slightly. The trimming frame will appear at the center of the image. If a trimming setting has already been selected for the image, the frame will appear around

the previously selected portion. Prints the top area of an image. Middle Prints the middle area of an image. This is extremely convenient for sending images to a photo developing service or for printing on a direct print function compatible printer CP Series You can set the number of copies up to 99 to be printed using the up or down button. See Selecting Menus and Settings p. Turn off the camera p. 30. Attach the AV Cable to the terminal on the camera. NTSC Japan, U.S.A., Canada, Taiwan, etc. Please see the Software Starter Guide for information system requirements and installation instructions. Connect the supplied USB interface cable to the computers USB port and the cameras DiGiTAL terminal. The LCD monitor displays in replay mode.

<http://www.erejuvenation.co.uk/images/brother-hl-2060-manual.pdf>



When the connection to the computer is complete, the LCD monitor turns off and the green indicator lights steady. This is useful for downloading images to a computer in which the software is not installed. These are called My Camera settings. Turn on the camera. The mode dial can be turned to any setting. MENU Press the button for longer than 5 seconds. Resetting settings to default. No Memory card You attempted to shoot or replay images without a CF card installed. Cannot record! You attempted to shoot an image without a CF card installed. Note the number and contact our Canon Customer Support Help Desk. If an error code displays directly after taking a picture, the shot may not have been recorded. Depending on the printer model, some messages may not display. No Paper Paper cassette is incorrectly inserted or out of paper. Or the paper feed isnt operating correctly. The following messages may appear when the camera is connected to the direct print compatible. Please request replacement of the waste tank at your nearest Canon customer support center listed in the Bubble Jet Quick Start Guide. Printer error Turn off the printer, then turn it on again. If. Replace the date battery holder back into its original position, and close the DiGiTAL terminal cover. Please do not attempt to charge any other type of batteries with this charger. Please unplug the adapter from the power outlet when you have finished using the camera. Please do not attempt to use any AC adapter other than AC Adapter Kit ACK600 with your camera. In order to attach any of these lenses, you also need to use the optional Conversion Lens Adapter LADC52C. Use this converter for taking wideangle shots. The wide converter changes the focal length of the camera bodys lens by a factor of 0.7 The thread diameter is 52 ram.. The lens changes the focal length of the camera bodys lens by a factor of 2.4x. This lens makes it easy to take macro shots.

<http://precisionheavyhaul.com/images/brother-hl-2070n-owners-manual.pdf>

Slow Shutter Portrait Mode Use this mode to shoot expansive landscape scenes. Page 77 Fast Shutter. Use this mode to shoot fast moving objects. Use this mode when taking shots that you want to Page 82 6 Press the button after the last shot. Use this mode to shoot movie frames. The resolution can Use the macro mode to shoot closeups of subjects in the You can take pictures with the self timer in any Shooting When the LCD monitor is on, images can be zoomed with Page 90 5 Press the zoom lever toward and hold it. The camera will shoot continuously at the speed of. Page 92 0. Page 93 Shooting Selecting Particular Effects. Camera settings such as shutter speed and aperture can Page 94 Setting the Aperture 2 Shoot the image. Page 95 Setting the Shutter Speed. When you set the shutter speed in the shutter speed Page 96 Manually Setting the Shutter Speed and Aperture 3 Shoot the image. Page 97 0. Page 98 Switching Between Autofocus Modes Setting the Aperture Page 99 Switching Between Light Metering Modes 3 Shoot the image. Page 100 Manually Setting the Shutter Speed and Aperture Page 102 Switching Between Autofocus Modes You can switch between metering modes to shoot.

<http://hellnocancershow.com/wp-content/plugins/formcraft/file-upload/server/content/files/16270688108d55---boss-rs80-manual.pdf>

Page 104 3 down Adjust the exposure compensation setting to avoid Page 106 4 Select Page 107 Setting the White Balance. When the white balance mode is set to match the light Page 108 Changing the Photo Effect 2 Select Page 109 Setting a Custom White Balance. You can set a custom white balance to obtain the optimal Page 114 Changing the ISO Speed Page 115 4 Press the button. Page 117 Shooting Problem Subjects for the Autofocus. The autofocus may not work well on the following types of The focus can be manually set. Page 120 Viewing Images in Sets of Nine Index Replay Resetting the File Numbers Page 121 Jumping Between Images 0. Page 122 Viewing Movies Replaying Page 123 Magnifying Images. Images can be magnified up to approximately 10 times. Page 125 Jumping Between Images. The display can be advanced or set back 9 images in Page 126 Viewing Movies Press it again Page 131 Protecting Images Rotating Images in the Display. Images can be rotated 90. LCD monitor. You can protect important images from accidental Page 136 About Printing Erasing Page 138 Selecting from the Print Order Menu Formatting a CF Card By connecting the Page 141 Please refer to the System Map supplied with your Series information. Print. Page 142 Selecting from the Print Order Menu Page 146 Setting the Print Settings Direct Print Function Connecting Bubble Jet Printer to the Camera Page 148 Printing Options for the. Page 149 0. Page 150 Setting the Print Settings Direct Print Function Page 152 3 Select Page 154 Print Settings DPOF Print Settings 1 In choose Page 157 0. Page 158 Print Settings DPOF Print Settings Number of Copies Page 162 5 Press the button. Page 164 Printing with DPOF Print Settings Page 166 0. Page 167 Via the USB Cable Image Transfer Settings DPOF Transfer Order. Using the camera, you can make marks on images you Page 168 3 Select images for transferring.

condosalebangkok.com/ckfinder/userfiles/files/commander-t7208-manual.pdf

Page 169 Viewing Images on a TV Set. A videocompatible television connected via the supplied. AV cable AVDC100 can be used to. Page 170 0. Page 171 Downloading Directly from a CF Card Downloading Images to a Computer. Download images taken with the camera to a computer in Page 172 Function Menu 1 Install the driver and the software Page 173 3 press Page 174 Rec. Menu Downloading Images without Installing the Page 176 Replay Menu List of Menu Options and Messages ISO Speed Sets the sensitivity at which images are 110 Redeye Sets whether or not the redeye 68 Auto Play Plays images automatically one after 130 Shutter Volume Adjusts the sound volume when the 40. Page 188 Resetting the Settings to Default Page 189 0. Page 190 List of Messages Page 191 Replacing the Date Battery Unidentified Image You attempted to replay an image that was Page 194 Waste tank full You can

mode and reach up to 2.50 meter. In a further explanation, Canon PowerShot A60 manual tells that the LCD Screen is quite big. It has 1.5 inches and supporting Live View feature. For connectivity, the USB 1.0 is ready to make a realtime data transfer.

Last but not least, 4 x AA batteries are required to supply the power for this camera. There are also several creative shooting modes and photo effects waiting to try. Aside from that, the A60 brings real compact body that is aimed at light travel usage. As off 2003, this camera is priced at 349 USD. Read another review about this camera in this page. Canon PowerShot A60 Manual User Guide As we stated at the beginning of this article, the aim of providing this writing is to bring the Canon PowerShot A60 Manual. This is the manual that will give you the information related to the specification, features, operation, instruction, camera manual, and others. So, for you who want to look for information regarding to this Canon camera product, referencing to the manual below will be the best thing to do. To give you the better access, we will provide the manual in PDF. So, before reaching out to the manual, it will be better if you download the PDF reader software first. Download PowerShot A60 User Manual That's all of the information related to the Canon PowerShot A60 Manual. We hope that the information below could be beneficial to update your understanding toward this camera product. If you have any thoughts about this product in general, we welcome you to put them in the comment session below. And if you find this information is useful, sharing this article in your personal page will be so much helpful. By continuing to use this website, you agree to their use. Please consider supporting us by disabling your ad blocker. Refresh. This page requires Javascript. Modify your browsers settings to allow Javascript to execute. See your browsers documentation for specific instructions. To install your download click on the name of the downloaded file. Access your account, or create a new account, click here to get started.

Recommended Software File Name Date File Size Optional Software File Name Date File Size
Recommended Manuals File Name Date File Size Optional Manuals File Name Date File Size
The Product purchased with this limited warranty is the only PowerShot Digital Camera to which this limited warranty applies. Warranty exchange or replacement does not extend the original warranty period of the Product. The sole warranty, if any, with the respect to such nonCanon brand items is given by the manufacturer or producer thereof. This limited warranty covers all defects encountered in normal use of the Products, and does not apply in the following cases A Canon Customer Care representative will attempt to diagnose the nature of the problem and correct it over the telephone. If the problem cannot be corrected over the telephone, you will be asked to follow the applicable procedures for MAILIN SERVICE. Note that a dated proof of purchase is required at the time of service. MAILIN SERVICE is a program under which your Product is repaired by a Canon U.S.A. or a Canon Canada authorized service center for the Product. You will be given the name, address and phone number of an authorized service center. It is your responsibility to properly package and send the defective Product, together with a copy of your dated proof of purchase, a complete explanation of the problem and a return address to the authorized service center at your expense. Do not include any other items with the defective Product. The Product covered by this limited warranty and proven to be defective upon inspection will be repaired and returned to you without charge by the authorized service center. Any Product received by the authorized service center that is not covered by the limited warranty will be returned unrepaired, or at the discretion of the authorized service center, you may receive a written estimate of repair at such cost as the service center may establish from time to time.

Direct connection to Canon CP Printers and Direct Photo Printers no computer required Scroll down to easily select items to add to your shopping cart for a faster, easier checkout. Visit the Canon Online Store Effectively doubles the flash range of the camera. Comes with mounting bracket. The cable connects to your camera and to the USB port on your PC or MAC Computer. Comes standard with the EOS 1Ds Mark III, 1D Mark IV, 1D Mark III, 1Ds Mark II, 1D Mark II N, 1D Mark II, 5D

Mark II, 7D, 5D, 50D, 40D, 30D, 20D, 10D, Digital Rebel XTi, Digital Rebel XT and Digital Rebel. Please see Compatibility tab for compatible models. Four pieces of weight, plastic pins and weight securing screws are included in the WWDC1 package. Discover everything Scribd has to offer, including books and audiobooks from major publishers. Start Free Trial Cancel anytime. Report this Document Download Now save Save Canon Powershot A60 A70 Repair Manual For Later 0 ratings 0% found this document useful 0 votes 568 views 19 pages Canon Powershot A60 A70 Repair Manual Uploaded by Calin Truta Description Full description save Save Canon Powershot A60 A70 Repair Manual For Later 0% 0% found this document useful, Mark this document as useful 0% 0% found this document not useful, Mark this document as not useful Embed Share Print Download Now Jump to Page You are on page 1 of 19 Search inside document Browse Books Site Directory Site Language English Change Language English Change Language. Please try again. Please try again. Then you can start reading Kindle books on your smartphone, tablet, or computer no Kindle device required. In order to navigate out of this carousel please use your heading shortcut key to navigate to the next or previous heading. Register a free business account If you are a seller for this product, would you like to suggest updates through seller support To calculate the overall star rating and percentage breakdown by star, we don't use a simple average.

<https://www.thebiketube.com/acros-3ware-9650se-user-manual>